

AMP RESEARCH®

Innovation in Motion

**AMERICAN DESIGNED,
ENGINEERED AND
MANUFACTURED.**



Power Step XL

Contents

- 4-8** PowerStep™ Power Running Boards
- 9** PowerStep XL™ Power Running Boards
- 10** PowerStep™ XTreme Power Running Boards
- 11** PowerStep™ Override Switch
- 11** Alloy Fuel Door
- 12-13** BedStep® Flip Down Bumper Step
- 14-15** BedStep®2 Box Side Access Step
- 16-17** BedXtender HD™ Max Cargo Cage for Trucks
- 18-19** BedXtender HD™ Sport Cargo Cage for Trucks
- 20-21** BedXtender HD™ Moto Cargo Cage for Trucks
- 22** Nomenclature Guide




INVENTED, ENGINEERED AND
MANUFACTURED IN THE USA

POWERSTEP™

GETTING INTO YOUR TRUCK SHOULDN'T FEEL LIKE CLIMBING MOUNT EVEREST

That's why AMP Research invented the Powerstep™, the automatic, electric-powered running board that instantly extends when you open your door, and retracts out of sight when the doors close for improved ground clearance, aerodynamics and appearance. Its sleek design, all-weather performance and legendary reliability set the industry standard.

- Low-profile integrated LED light system – standard
- High-strength, die-cast aluminum alloy components with an anodized and PTFE-coated, military-spec finish to resist corrosion
- Precision stainless steel pivot pins for rock-solid stability
- Maintenance free self-lubricating bushings for all-weather performance
- 5-year/60,000 mile warranty

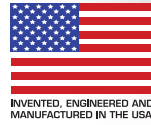

POWERSTEP™

YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
2002-2006	Cadillac	Escalade		(1) Includes EXT/ESV; Can be used in lieu of old part # 75114-01A	75115-01A
2007-2014	Cadillac	Escalade			75125-01A
2015-2019	Cadillac	Escalade		Plug N' Play System; Includes EXT/ESV	76127-01A-B
2007-2013	Chevrolet	Avalanche			75125-01A
2000-2006	Chevrolet	Avalanche		(1) Chevrolet Avalanche (without cladding) 2001-'06; Chevrolet Avalanche 1500 with cladding 2001-'06	75115-01A
2015-2019	Chevrolet	Colorado		Plug N' Play System	76153-01A
2007-2013	Chevrolet	Silverado 1500	Extended/Crew		75126-01A
2014-2018	Chevrolet	Silverado 1500	Extended/Crew		75154-01A-B
2014-2018	Chevrolet	Silverado 1500	Double/Crew Cab	Plug N' Play System	76154-01A
2019	Chevrolet	Silverado 1500	Double/Crew Cab	Plug N' Play System	76254-01A
1999-2006	Chevrolet	Silverado 1500/2500/3500	Extended/Crew	(1) Includes 2007 Classic	75113-01A
2007-2014	Chevrolet	Silverado 2500/3500	Extended/Crew	Excludes 2011-2014 Diesel	75126-01A
2011-2014	Chevrolet	Silverado 2500/3500	Extended/Crew	Diesel only	75146-01A
2015-2016	Chevrolet	Silverado 2500/3500	Double/Crew Cab	Plug N' Play System, Diesel only	76147-01A
2015-2019	Chevrolet	Silverado 2500/3500	Extended/Crew	Excludes Diesel	75154-01A-B
2015-2019	Chevrolet	Silverado 2500/3500	Double/Crew Cab	Plug N' Play System, Gas only	76154-01A
2017-2019	Chevrolet	Silverado 2500/3500	Double/Crew Cab	Plug N' Play System, Diesel only	76247-01A
2000-2006	Chevrolet	Tahoe/Suburban		(1) Chevrolet Tahoe Z71/LS/LT 2001-'06; Chevrolet Suburban Z71/LS/LT 2001-'06	75115-01A
2007-2014	Chevrolet	Tahoe/Suburban			75125-01A
2015-2019	Chevrolet	Tahoe/Suburban		Plug N' Play System	76127-01A-B
2002-2008	Dodge	Ram 1500	Quad Cab		75101-01A
2009-2018	Ram	1500	All Cabs	Gas only	75138-01A-B
2018	Ram	1500	All Cabs	Diesel only	76239-01A
2019	Ram	1500 Classic	All Cabs	Gas only	75138-01A-B
2019	Ram	1500 Classic	All Cabs	Diesel only	76239-01A
2019	Ram	1500	All Cabs	Plug N' Play System	76240-01A
2006-2009	Dodge	Ram 1500/2500/3500	Mega Cab		75118-01A
2013-2015	Ram	1500/2500/3500	All Cabs	Plug N' Play System, HD MODELS Factory Air Ride Suspension requires Air Tank Relocation Kit, Purchase Kit before installation	76138-01A
2016-2017	Ram	1500/2500/3500	All Cabs	Plug N' Play System, HD MODELS Factory Air Ride Suspension requires Air Tank Relocation Kit, Purchase Kit before installation	76139-01A

Notes: **(1) DIODES REQUIRED.** Additional diodes required for 1999-2002 GM vehicles.
(2) DIODES REQUIRED. Additional diodes required for Ford Super Duty 1999-2001 plus 2004-2007 Super Duty without remote keyless.



POWERSTEP™

YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
2003-2009	Dodge	Ram 2500/3500	Quad Cab		75101-01A
2010-2019	Ram	2500/3500	All Cabs	Factory Air Ride Suspension requires Air Tank Relocation Kit (HD models only), Purchase Kit before installation	75138-01A-B
2018-2019	Ram	2500/3500	All Cabs	Plug N' Play System	76239-01A
2014-2017	Dodge	Durango		Plug N' Play System; Gas only	76331-01A
2001-2003	Ford	F-150	SuperCrew	Ford F-150 Super Crew, 2001-'03, 2004 Heritage	75111-01A
2004-2008	Ford	F-150	All Cabs		75105-01A
2009-2014	Ford	F-150	All Cabs		75141-01A
2015-2019	Ford	F-150	All Cabs	Plug N' Play System	76151-01A
1999-2001	Ford	F-250/350/450	All Cabs	(2) Diode Kit may be required - purchase kit before installation SuperCab/ Regular Cab requires minor cutting	75104-01A
2002-2016	Ford	F-250/350/450	All Cabs	F-250/350/450 Regular & Super Cab 2002-2003 requires minor cutting	75134-01A
2004-2007	Ford	F-250/350/450	All Cabs	(2) Diode Kit may be required - purchase kit before installation SuperCab/ Regular Cab requires minor cutting	75104-01A
2008-2016	Ford	F-250/350/450	All Cabs	F-250/350/450 Regular Cab, 2008-2015 requires minor cutting F-250/350/450 Super Cab, 2008-2015 requires minor cutting	75134-01A
2014-2017	Ford	Transit		Plug N' Play System, Gas only (Passenger Side Only)	76159-01A
2014-2017	Ford	Transit		Plug N' Play System, Gas only (Driver and Passenger side)	76259-01A
2009-2014	Ford	F150	All Cabs	Plug N' Play System	76141-01A
2008-2016	Ford	F-250/350/450	All Cabs	Plug N' Play System; F-250/350/450 Reg & Super Cab requires minor cutting	76134-01A
2008-2016	Ford	F-250/350/450	All Cabs	Plug N' Play System; F-250/350/450 Reg & Super Cab requires minor cutting; Extra Wide Linkage	76234-01A
2017-2019	Ford	F-250/350/450	All Cabs	Plug N' Play System	76235-01A
2018	Ford	Expedition		Plug N' Play System Gas only Does Not fit Max Models	76332-01A
2015-2019	GMC	Canyon		Plug N' Play System	76153-01A
2007-2013	GMC	Sierra 1500	Extended/Crew		75126-01A
2014-2018	GMC	Sierra 1500	Extended/Crew		75154-01A-B
2014-2018	GMC	Sierra 1500	Double/Crew Cab	Plug N' Play System	76154-01A
2019	GMC	Sierra 1500	Double/Crew Cab	Plug N' Play System	76254-01A
1999-2006	GMC	Sierra 1500/2500/3500	Extended/Crew	Includes 2007 Classic	75113-01A
2007-2014	GMC	Sierra 2500/3500	Extended/Crew	Excludes 2011-2014 Diesel	75126-01A
2011-2014	GMC	Sierra 2500/3500	Extended/Crew	Diesel only	75146-01A
2015-2016	GMC	Sierra 2500/3500	Double/Crew Cab	Plug N' Play System, Diesel only	76147-01A
2015-2019	GMC	Sierra 2500/3500	Extended/Crew	Excludes Diesel	75154-01A-B
2015-2019	GMC	Sierra 2500/3500	Double/Crew Cab	Plug N' Play System, Gas only	76154-01A

Notes: **(1) DIODES REQUIRED.** Additional diodes required for 1999-2002 GM vehicles.
(2) DIODES REQUIRED. Additional diodes required for 2004-2007 Super Duty without remote keyless.



POWERSTEP™

YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
2017-2019	GMC	Sierra 2500/3500	Double/Crew Cab	Plug N' Play System, Diesel only	76247-01A
2000-2006	GMC	Yukon/Yukon XL		(1) Yukon Standard 2001-06; Denali 2001-'06	75115-01A
2007-2014	GMC	Yukon/Yukon XL			75125-01A
2015-2019	GMC	Yukon/Yukon XL		Plug N' Play System	76127-01A-B
2003-2009	Hummer	H2			75107-01A
2005-2010	Hummer	H3		Hummer H3 2005-2010; Hummer H3T 2009-2010. Can be used in lieu of old part # 75114-01A, minor cutting required	75116-01A
2004-2010	Infinity	QX56		Requires minor cutting	75110-01A
2014-2017	Jeep	Grand Cherokee			76330-01A
2007-2018	Jeep	Wrangler JK 2Dr	2 Door		75121-01A
2007-2018	Jeep	Wrangler JK 4Dr	4 Door		75122-01A
2018-2019	Jeep	Wrangler JL 4Dr	4 Door		75132-01A
2006-2008	Lincoln	Mark LT			75105-01A
2007-2018	Mercedes-Benz	Sprinter	1 Sided Sprinter		75163-01A
2007-2018	Mercedes-Benz	Sprinter	2 Sided Sprinter		76263-01A
2004-2015	Nissan	Armada		Requires minor cutting	75110-01A
2016-2018	Nissan	Titan/Titan XD		Titan / Titan XD - Crew Cab 72" Boards; Titan / Titan XD - Single Cab 43" Boards (2017/18 only)	75120-01A
2016-2018	Nissan	Titan/Titan XD		Plug N' Play System; Titan / Titan XD - Crew Cab 72" Boards; Titan / Titan XD - Single Cab 43" Boards (2017/18 only)	76120-01A
2004-2015	Nissan	Titan	Crew/King Cabs	King Cab requires minor cutting	75110-01A
2010-2019	Toyota	4Runner		Excludes Limited with cladding	75155-01A
2008-2017	Toyota	Sequoia			75137-01A
2005-2015	Toyota	Tacoma	Double Cab		75142-01A
2016-2019	Toyota	Tacoma	Double Cab/Access		75162-01A
2007-2017	Toyota	Tundra	Double Cab/CrewMax	Plug N' Play System requires minor cutting on Double Cab	76137-01A
2007-2019	Toyota	Tundra	Double Cab/CrewMax	Requires minor cutting on Double Cab	75137-01A

Notes: **(1) DIODES REQUIRED.** Additional diodes required for 1999-2002 GM vehicles.
(2) DIODES REQUIRED. Additional diodes required for Ford Super Duty 1999-2001 plus 2004-2007 Super Duty without remote keyless.

POWERSTEP™ EXTRAS AND OPTIONS


GENERIC DESCRIPTION	YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
PowerStep Plug-N-Play Conversion Kit	2014-2018	Chevrolet	Silverado 1500		Does not include controller	76400-01A
PowerStep Plug-N-Play Conversion Kit	2014-2018	GMC	Sierra 1500		Does not include controller	76400-01A
PowerStep Plug-N-Play Conversion Kit	2015-2018	Chevrolet	Silverado 2500/3500		Does not include controller	76400-01A
PowerStep Plug-N-Play Conversion Kit	2015-2018	GMC	Sierra 2500/3500		Does not include controller	76400-01A
PowerStep Plug-N-Play Conversion Kit	2009-2014	Ford	F-150			76401-01A
PowerStep Plug-N-Play Conversion Kit	2013-2015	Dodge	RAM		Does not include controller	76402-01A
PowerStep Plug-N-Play Conversion Kit	2008-2016	Ford	F-250/F350			76403-01A
PowerStep Plug-N-Play Pass Thru Harness	All-All	All	All		Plug N' Play Pass Thru Harness - All Applicable Models	76404-01A
Air Tank Relocation Kit	2014-2018	Dodge	Ram 2500/3500	Crew Cab	Crew Cab / Regular Cab only	79101-01A
Air Tank Relocation Kit	2014-2018	Dodge	Ram 2500/3500	Mega Cab	Mega Cab Only	79102-01A
Override Switch with STA1 controller (retrofit)					Fits all kits except (part # 75141-01A & part # 75134-01A)	79105-01A
Override Switch						79106-01A
Override Switch with STB1controller (retrofit)					Fits only part # 75141-01A & part # 75134-01A	79107-01A
PowerStep 79" Chrome Trim Strip					Fits all applications with NEW STYLE Extrusion; Call AMP tech support for details; Will NOT fit 2011-2014 GM Diesel, H2, H3, Jeep, and Tacoma	75149-01A
PowerStep 85" Chrome Trim Strip					Fits the following applications: 75146-01A, 76147-01A, 76247-01A, 76151-01A, 76235-01A	75150-01A
PowerStep 79" Trim Strip - Full Kit Extrusions Included (Set of 2)					Fits all applications with OLD STYLE Extrusion; Call AMP tech support for details; NOT required for 2011-2014 GM Diesel; Will NOT fit H2, H3, Jeep, and Toyota Tacoma	75151-01A
PowerStep Extension Arm Kit	2002-2013	Dodge	Ram		Compatible with the following Dodge Ram trucks: 75101, 75118, 75143 (option)	75130-01A
PowerStep Extension Arm Kit	1999-2013	Ford	F-250/350/450		Compatible with all Ford Super Duty trucks: 75104, 75134 (option)	75130-01A
PowerStep LED Light Kit	1999-2013	All	All		Fits all applications with NEW STYLE controller; Call AMP Tech Support 888-983-2206 for part verification	75131-01A

POWERSTEP™ FOR VANS & CUVS

PowerStep Electric Running Boards have always been designed with passengers in mind – to provide the most natural stepping platform into and out of the vehicle. The latest PowerStep for vans and CUVs are designed to deploy horizontally from the vehicle for an ideal stepping platform. Both hinged and sliding doors trigger the PowerStep to deploy, then retract safely out of sight when the door closes for improved ground clearance, aerodynamics and appearance.



- High-texture, powder-coated finish for maximum grip and durability
- High-strength, die-cast aluminum-alloy components
- Pressure-sensitive, pinch-proof safety technology
- Low-profile integrated LED light system
- Backed by a 5 year / 60,000 mile warranty

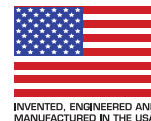

- Automatic power-deploying running boards
- Integrated LED light system
- Rail constructed of 6063 Marine grade aluminum
- Attractive and durable black textured finish
- Step, die-cast aluminum alloy components with an anodized and PTFE coated, military spec finish to resist corrosion
- Precision stainless steel pivot pins for rock solid stability
- Integrated bracket systems support up to 600 lbs.
- Maintenance-free, self-lubricating bushing for all-weather performance
- 5-year/60,000 mile warranty

POWERSTEP XL™

SPECIFICALLY DESIGNED FOR LIFTED TRUCKS – 3” ADDITIONAL DROP

Featuring a rugged, bold design, the new patented PowerStep XL™ offers a 3” lower stepping surface than the original PowerStep™ and makes accessing your lifted truck easier.

POWERSTEP XL™

YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
2007-2013	Chevrolet	Silverado 1500	Extended/Crew	Non Plug N' Play System	77126-01A
2014-2018	Chevrolet	Silverado 1500	Crew Cab	Plug N' Play System; Gas Only	77154-01A
2019	Chevrolet	Silverado 1500	Crew Cab	Plug N' Play System	77254-01A
2015-2019	Chevrolet	Silverado 2500/3500	Crew Cab	Plug N' Play System; Gas Only	77154-01A
2007-2014	Chevrolet	Silverado 2500/3500	Crew Cab	Non Plug N' Play System	77126-01A
2009-2012	Dodge	Ram 1500	Crew Cab	Non Plug N' Play System	77158-01A
2013-2015	Ram	1500	Crew Cab	Plug N' Play System	77138-01A
2018	Ram	1500	Crew Cab	Plug N' Play System	77238-01A
2019	Ram	1500 Classic	Crew Cab	Plug N' Play System	77238-01A
2019	Ram	1500	Crew Cab	Plug N' Play System	77240-01A
2010-2017	Ram	2500/3500	Crew Cab	Non Plug N' Play System	77158-01A
2010-2017	Ram	2500/3500	Mega Cab	Non Plug N' Play System	77168-01A
2013-2017	Ram	2500/3500	Crew Cab	Plug N' Play System	77138-01A
2013-2017	Ram	2500/3500	Mega Cab	Plug N' Play System	77148-01A
2018-2019	Ram	2500/3500	Crew Cab	Plug N' Play System	77238-01A
2018-2019	Ram	2500/3500	Mega Cab	Plug N' Play System	77248-01A
2004-2008	Ford	F-150	All Cabs	Non Plug N' Play System	77105-01A
2009-2014	Ford	F-150	SuperCrew	Plug N' Play System	77141-01A
2015-2019	Ford	F-150	SuperCrew	Plug N' Play System	77151-01A
2004-2007	Ford	F-250/350/450	SuperCrew	Non Plug N' Play System	77104-01A
2008-2016	Ford	F-250/350/450	SuperCrew	Plug N' Play System	77134-01A
2017-2019	Ford	F-250/350/450	SuperCrew	Plug N' Play System	77235-01A
2007-2013	GMC	Sierra 1500	Crew Cab	Non Plug N' Play System; Excludes 2011-2013 Diesel	77126-01A
2014-2018	GMC	Sierra 1500	Crew Cab	Plug N' Play System; Gas Only - Excludes Diesel	77154-01A
2007-2014	GMC	Sierra 2500/3500	Crew Cab	Non Plug N' Play System; Excludes 2011-2014 Diesel	77126-01A
2015-2019	GMC	Sierra 2500/3500	Crew Cab	Plug N' Play System; Gas Only - Excludes Diesel	77154-01A
2007-2018	Jeep	Wrangler JK	2 Door	Includes OEM style illumination	77121-01A
2007-2018	Jeep	Wrangler JKU	4 Door	Includes OEM style illumination	77122-01A
2018-2019	Jeep	Wrangler JL	2 Door	Includes OEM style illumination	77133-01A
2018-2019	Jeep	Wrangler JL	4 Door	Includes OEM style illumination	77132-01A
2018-2019	Toyota	Tundra	Crew Max Only	Plug N' Play System	77137-01A

POWERSTEP™ XTREME

FOR EXTREME CONDITIONS

**FOR THOSE OWNERS WHO LIVE AND WORK
IN CHALLENGING ENVIRONMENTS**

AMP Research® PowerStep™ XTreme – made specifically for extreme environments. Sub-zero winters, mud caked rockers; AMP Research PowerStep™ XTreme is designed to hold up to the extreme.


- Dual motors drive this electric-powered running board to deliver more power when deploying and retracting
- LED lights illuminate boards when deployed
- Aggressive design for extreme traction, all-weather performance made from high-strength, die-cast aluminum components
- Legendary reliability with durable, high-texture powder-coated finish to resist corrosion and maximize grip
- OEM-quality motors, drive system and wiring harness that sets the industry standard
- 5-year/60,000 mile warranty



TRUCK XTREME



JEEP XTREME

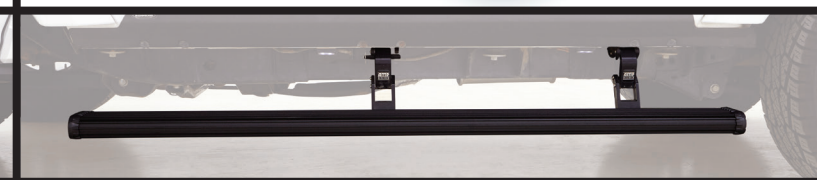

POWERSTEP™ XTREME

YEARS	MAKE	MODEL	SUB MODEL	NOTES	PART #
2014-2018	Chevrolet	Silverado 1500	Extended/Crew	Plug N' Play System	78154-01A
2019	Chevrolet	Silverado 1500	Crew Cab	Plug N' Play System	78254-01A
2015-2019	Chevrolet	Silverado 2500/3500	Extended/Crew	Plug N' Play System; Excludes Diesel Models	78154-01A
2018	Ram	1500	All Cabs	Plug N' Play System; Excludes Mega Cab with Air Ride Suspension	78239-01A
2019	Ram	1500 Classic	All Cabs	Plug N' Play System; Excludes Mega Cab with Air Ride Suspension	78239-01A
2019	Ram	1500	Crew Cab	Plug N' Play System	78240-01A
2013-2017	Ram	2500/3500	All Cabs	Plug N' Play System; Excludes Mega Cab with Air Ride Suspension	78139-01A
2018-2019	Ram	2500/3500	All Cabs	Plug N' Play System; Excludes Mega Cab with Air Ride Suspension	78239-01A
2015-2019	Ford	F-150	All Cabs	Plug N' Play System	78151-01A
2008-2016	Ford	F-250/350/450	All Cabs	Plug N' Play System	78234-01A
2017-2019	Ford	F-250/350/450	All Cabs	Plug N' Play System	78235-01A
2014-2018	GMC	Sierra 1500	Extended/Crew	Plug N' Play System	78154-01A
2019	GMC	Sierra 1500	Extended/Crew	Plug N' Play System	78254-01A
2015-2019	GMC	Sierra 2500/3500	Extended/Crew	Plug N' Play System; Excludes Diesel Models	78154-01A
2007-2018	Jeep	Wrangler JK 2Dr	2 Door		78121-01A
2007-2018	Jeep	Wrangler JK 4Dr	4 Door		78122-01A
2018-2019	Jeep	Wrangler JL 4Dr	4 Door		78132-01A
2007-2019	Toyota	Tundra	CrewMax		78137-01A

POWERSTEP™ OVERRIDE SWITCH

TAKE CONTROL OF YOUR POWERSTEP™

Now you can manually control your AMP Research PowerStep™ with a temporary override switch. Whether deploying them to wash, or retracting them for off-roading, the switch gives you the flexibility you want in a PowerStep™.

- Allows the PowerStep™, PowerStep XL™, and PowerStep™ XTreme to be manually raised or lowered
- The toggle switch can be easily installed on the dash, and is wired directly to the PowerStep™ controller 5-year limited warranty



Override Retract (Up)...
keeps the steps up and out of the way, regardless of what you do with the doors.



Automatic Mode (Middle)...
steps are activated by the doors, deploying when the doors are opened, retracting when they're closed.



Override Deploy (Down)...
keeps the steps down and ready for use, regardless of what you do with the doors.

POWERSTEP™ OVERRIDE SWITCH

PART #	DESCRIPTION
79105-01A	Override Switch with STA1 Controller – fits all excluding part # 75141-01A & part # 75134-01A
79107-01A	Override Switch with STB1 Controller – fits only part # 75141-01A & part # 75134-01A
79106-01A	Override Switch without Controller – to be used on new steps with new controller



ALLOY FUEL DOOR


YEARS	MAKE	MODEL	SUB MODEL	COLOR	PART #
2007-2018	Jeep	Wrangler JK	2-DR & 4-DR	Brushed	73000-00A
2007-2018	Jeep	Wrangler JK	2-DR & 4-DR	Black	73000-01A

ALLOY FUEL DOOR

JEEP WRANGLER JK ALUMINUM ALLOY

Made from die-cast aluminum alloy, this fuel door cover features expressive styling that compliments the body lines. A patented, cam-action hinge ensures no rattling when driving on rough roads or off pavement.

- Durable die-cast aluminum housing
- Corrosion-resistant construction
- No-rattle, cam-action hinge
- Two finishes available: powder-coated black and brushed aluminum
- Easy no-drill installation
- 3-year limited warranty

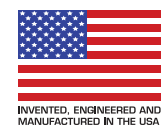

INVENTED, ENGINEERED AND
MANUFACTURED IN THE USA



BEDSTEP®

GO AHEAD AND STEP ON IT. BEDSTEP® IS A REAL TIME SAVER.

Not to mention knee and back saver. Strong and rugged, this non-slip, retractable bumper step quickly flips down with the nudge of a foot providing a faster, easier and safer way to load or unload your pickup's cargo. Supports up to 300 lbs. Frame mounts under the rear bumper so it works even with an open tailgate or when towing.



FLIP DOWN
with a simple nudge
of the foot



- Engineered to support loads up to 300 lbs
- High-strength aluminum alloy components
- Precision stainless-steel pivot pins for rock-solid stability
- Maintenance-free, self lubricating bushings for all-weather performance
- 3-year/36,000 mile warranty


BEDSTEP®

YEARS	MAKE	MODEL	NOTES	PART #
2007-2013	Chevrolet	Silverado 1500	Excludes '07 Classic & Flairside	75300-01A
2014-2018	Chevrolet	Silverado 1500		75314-01A
2019	Chevrolet	Silverado 1500		75323-01A
2007-2010	Chevrolet	Silverado 2500/3500	Excludes '07 Classic & Flairside	75300-01A
2011-2014	Chevrolet	Silverado 2500/3500		75308-01A
2015-2019	Chevrolet	Silverado 2500/3500		75315-01A
1999-2006	Chevrolet	Silverado 1500/2500/3500	Includes '07 Classic, excludes Flairside	75301-01A
2002-2008	Dodge	Ram 1500		75304-01A
2009-2018	Ram	1500	Not compatible with dual exhaust or ecodiesel models	75306-01A
2019	Ram	1500 Classic		75306-01A
2009-2018	Ram	1500	Factory dual exhaust compatible	75310-01A
2019	Ram	1500 Classic		75310-01A
2019	Ram	1500		75322-01A
2003-2009	Dodge	Ram 2500/3500		75304-01A
2010-2019	Ram	2500/3500	Not compatible with dual exhaust	75306-01A
2006-2014	Ford	F-150	Excludes Flairside, not compatible with some 04/05 models	75302-01A
2015-2019	Ford	F-150		75312-01A
1999-2016	Ford	F-250/350/450		75303-01A
2017-2019	Ford	F-250/350/450		75313-01A
2007-2013	GMC	Sierra 1500	Excludes '07 Classic & Flairside	75300-01A
2014-2018	GMC	Sierra 1500		75314-01A
2019	GMC	Sierra 1500		75323-01A
1999-2006	GMC	Sierra 1500/2500/3500	Includes '07 Classic, excludes Fairside	75301-01A
2007-2010	GMC	Sierra 2500/3500	Excludes '07 Classic & Flairside	75300-01A
2011-2014	GMC	Sierra 2500/3500		75308-01A
2015-2019	GMC	Sierra 2500/3500		75315-01A
2007-2018	Jeep	Wrangler JK	Compatible with some factory bumpers and aftermarket bumpers	75311-01A
2018-2019	Jeep	Wrangler JL	Compatible with some factory bumpers and aftermarket bumpers	75321-01A
2005-2015	Toyota	Tacoma		75307-01A
2016-2019	Toyota	Tacoma		75317-01A
2007-2013	Toyota	Tundra		75305-01A
2014-2015	Toyota	Tundra		75309-01A
2016-2019	Toyota	Tundra		75316-01A

BEDSTEP®2

SIDE STEPS FOR HARD-WORKING TRUCKS

The AMP Research Bedstep®2 mounts just behind the cab, forward of the rear wheel, providing a faster, easier and safer route to access toolboxes, equipment and cargo in the bed. Easily installed, this frame-mounted, retractable truck step can be mounted on either side of the truck box, and it flips down or retracts with just the nudge of your foot.

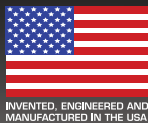

- Side-mounted bed access step
- Engineered to support loads up to 300 lbs
- High-strength aluminum alloy components
- Precision stainless-steel pivot pins for rock-solid stability
- Maintenance-free, self-lubricating bushings for all-weather performance
- 3-year/36,000 mile warranty



FLIP DOWN
with a simple nudge
of the foot

BEDSTEP®2

YEARS	MAKE	MODEL	SUB DETAIL	NOTES	PART #
1999-2013	Chevrolet	Silverado	All Beds	Dually requires part # 75610-01A for installation	75400-01A
2014-2018	Chevrolet	Silverado 1500	All Beds		75407-01A
2019	Chevrolet	Silverado 1500	Short Bed Only		75415-01A
2019	Chevrolet	Silverado 1500	Mid/Long Bed		75416-01A
2015-2019	Chevrolet	Silverado 2500/3500	All Beds		75407-01A
2002-2008	Dodge	Ram 1500			75404-01A
2009-2018	Ram	1500			75406-01A
2019	Ram	1500 Classic			75406-01A
2019	Ram	1500			75414-01A
2003-2009	Dodge	Ram 2500/3500			75404-01A
2010-2013	Ram	2500/3500	Mega Cab		75406-01A
2014-2019	Ram	2500/3500	DS	Excludes Dually	75411-01A
2014-2019	Ram	3500	DS	Dually 8' Bed	75410-01A
2015-2019	Ford	F-150		Fits all beds	75412-01A
2009-2014	Ford	F-150	All Beds		75402-01A
1999-2016	Ford	F-250/350	All Beds		75403-01A
2017-2019	Ford	F-250/350	All Beds		75413-01A
2008-2016	Ford	F-450/550	All Beds		75403-01A
1999-2013	GMC	Sierra	All Beds	Dually requires part # 75610-01A for installation	75400-01A
2014-2018	GMC	Sierra 1500	All Beds		75407-01A
2019	GMC	Sierra 1500	Short Bed Only		75415-01A
2019	GMC	Sierra 1500	Mid/Long Bed		75416-01A
2015-2019	GMC	Sierra 2500/3500	All Beds		75407-01A
2007-2019	Toyota	Tundra	Crewmax		75405-01A
2007-2019	Toyota	Tundra	Regular/Double Cab		75409-01A


EXTRAS AND OPTIONS

YEARS	MAKE	MODEL	SUB DETAIL	NOTES	PART #
2007-2013	Chevrolet	Silverado	Dually		75611-01A
2007-2013	GMC	Sierra	Dually		75611-01A
2002-2019	Dodge	Ram 2500/3500		Dually Kit; Not required for Mega Cab dually	75611-01A

BEDXTENDER HD™ MAX

CLASSIC U-SHAPE DESIGN FOR MAXIMUM CARGO CAPACITY.

Flip it out with the tailgate open to gain up to 2-feet of enclosed cargo area. Flip it inside and close the tailgate to keep tools and smaller cargo contained in the truck bed.

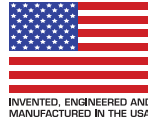

- Lightweight, super strong 6063 T6 aluminum alloy tubes
- Rugged glass-reinforced nylon composite uprights
- Instantly adds up to 2-feet of length to your truck bed


- Durable black or silver powder-coated finish
- Easy to install and easy to remove
- 3-year/36,000 mile warranty

BEDXTENDER HD™ MAX

YEARS	MAKE	MODEL	SUB MODEL	NOTES	BLACK PART #	SILVER PART #
2015-2019	Chevrolet	Colorado			74817-01A	74817-00A
2007-2018	Chevrolet	Silverado	Standard Bed		74815-01A	74815-00A
2019	Chevrolet	Silverado	Standard Bed		74841-01A	74841-00A
1982-2019	Dodge	Ram	Standard Bed	Dually requires part # 74610-01A for installation	74814-01A	74814-00A
2019	Ram	1500	Standard Bed		74840-01A	74840-00A
1997-2003	Ford	F-150	Standard Bed	Excludes Super Crew, includes 2004 Heritage	74814-01A	74814-00A
2004-2018	Ford	F-150	Standard Bed	Excludes 2004 Heritage	74813-01A	74813-00A
1999-2018	Ford	F-250/350	Standard Bed		74814-01A	74814-00A
2011-2014	Ford	Ranger			74824-01A	74824-00A
2015-2019	GMC	Canyon			74817-01A	74817-00A
2007-2018	GMC	Sierra	Standard Bed		74815-01A	74815-00A
2019	GMC	Sierra	Standard Bed		74841-01A	74841-00A
2005-2008	Lincoln	Mark LT	Standard Bed		74813-01A	74813-00A
1998-2017	Nissan	Frontier	Standard Bed	Requires part # 74601-01A for installation	74811-01A	74811-00A
1998-2014	Nissan	Navara			74823-01A	74823-00A
2004-2019	Nissan	Titan	Standard Bed		74814-01A	74814-00A
2005-2015	Toyota	Tacoma			74811-01A	74811-00A
2000-2006	Toyota	Tundra	Double Cab		74811-01A	74811-00A
2007-2019	Toyota	Tundra			74813-01A	74813-00A
2009-2014	VW	Amarok			74822-01A	74822-00A

EXTRAS AND OPTIONS

YEARS	MAKE	MODEL	NOTES	PART #
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A
1984-2004	Toyota	All	L Bracket Kit	74601-01A
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A
2004-2019	Ford	F-150	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
2008-2019	Ford	F-250/350	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
1984-2018	All	All	Mounting Kit	74604-01A
1984-2018	All	All	Quick Latch Bracket Kit, recommended for tonneaus and shells	74605-01A
2007-2018	GMC	Sierra	Mounting Bracket	74606-01A
2005-2017	Nissan	Frontier	Latch Kit (screw and barrel only)	74607-01A
1982-2019	All	All	Quick Mount Bracket Kit	74608-01A
1982-2019	All	All	Tonneau Cover Spacer Kit	74609-01A
2014-2018	RAM	Dually	Bracket Kit	74610-01A

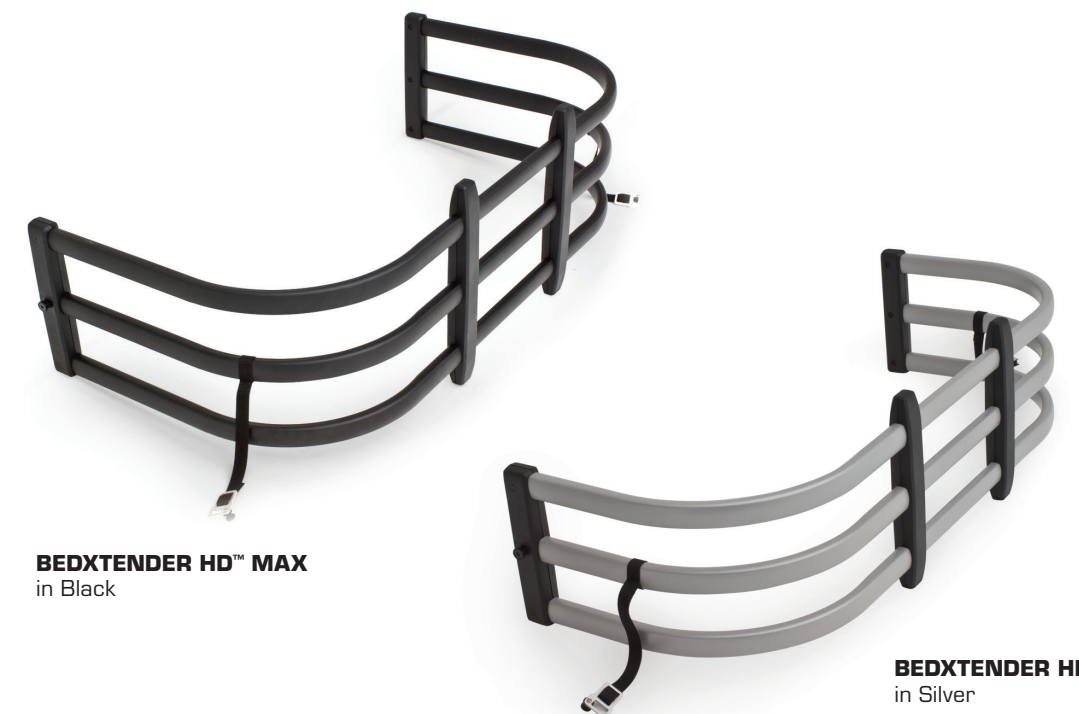


BEDXTENDER HD™ MAX
in Black

BEDXTENDER HD™ MAX
in Silver

BEDXTENDER HD™ SPORT

V-SHAPE DESIGN IS THE PERFECT MIX OF FORM AND FUNCTION THAT KEEPS YOUR GEAR SECURE.

Provides the extra clearance needed when used with some tonneau cover rails. Flip it out with the tailgate open to gain up to 2-feet of enclosed cargo area. Flip it inside and close the tailgate to keep tools and smaller cargo contained in the truck bed.

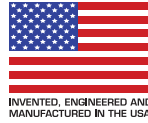

- Tapered V-shape design
- Rounded-rectangle, 6063 T6 aluminum alloy tubes
- Torque-resistant clam-shell design composite uprights

- 3-year/36,000 mile warranty
- Durable silver or black powder-coated finish
- Easy assembly and installation

BEDXTENDER HD™ SPORT

YEARS	MAKE	MODEL	SUB MODEL	NOTES	BLACK PART #	SILVER PART #
1988-1999	Chevrolet	C/K	Stepside		74802-01A	74802-00A
2015-2019	Chevrolet	Colorado			74816-01A	74816-00A
2004-2012	Chevrolet	Colorado			74802-01A	74802-00A
1996-2004	Chevrolet	S10	Stepside	Requires part # 74601-01 for installation	74802-01A	74802-00A
2007-2018	Chevrolet	Silverado	Standard Bed		74805-01A	74805-00A
2019	Chevrolet	Silverado	Standard Bed		74831-01A	74831-00A
1999-2004	Chevrolet	Silverado	Stepside	1999-2004 requires GM Mounting Kit part # 74606-01A	74802-01A	74802-00A
1996-2004	Chevrolet	S-10	Standard Bed	Requires part # 74601-01 for installation	74801-01A	74801-00A
1988-2000	Chevrolet	C/K	Standard Bed		74804-01A	74804-00A
2001-2006	Chevrolet	Silverado	Standard Bed	Includes '07 Classic	74804-01A	74804-00A
1987-2011	Dodge	Dakota			74802-01A	74802-00A
1981-1993	Dodge	Ram	Stepside		74802-01A	74802-00A
1982-2018	Dodge	Ram	Standard Bed		74804-01A	74804-00A
2019	Dodge	Ram	Standard Bed		74830-01A	74830-00A
1997-2004	Ford	F-150	Standard Bed	Ford F-150 - 1997-'03, F-150 - Heritage Edition 2004"	74804-01A	74804-00A
1997-2009	Ford	F-150	Flareside		74802-01A	74802-00A
2004-2019	Ford	F-150		Excludes Heritage/Stepside/Flareside; Excludes models equipped with Ford's integrated tailgate step Optional no-drill bracket available - part # 74602-01A	74803-01A	74803-00A
1999-2007	Ford	F-250/350	Standard Bed		74804-01A	74804-00A
2008-2019	Ford	F-250/350	Standard Bed	Excludes models equipped with Ford integrated tailgate step	74804-01A	74804-00A
1982-2012	Ford	Ranger			74802-01A	74802-00A
1988-1999	GMC	C/K	Stepside		74802-01A	74802-00A
1988-2000	GMC	C/K	Standard Bed		74804-01A	74804-00A
2015-2019	GMC	Canyon			74816-01A	74816-00A
2004-2012	GMC	Canyon			74802-01A	74802-00A
1999-2004	GMC	Sierra	Stepside	1999-2004 requires GM Mounting Kit part # 74606-01A	74802-01A	74802-00A
2001-2006	GMC	Sierra	Standard Bed	Includes '07 Classic	74804-01A	74804-00A
2007-2018	GMC	Sierra	Standard Bed		74805-01A	74805-00A
2019	GMC	Sierra	Standard Bed		74831-01A	74831-00A
1996-2004	GMC	Sonoma	Standard Bed	Requires part # 74601-01A for installation	74801-01A	74801-00A
1996-2004	GMC	Sonoma	Stepside	Requires part # 74601-01A for installation	74802-01A	74802-00A
2004-2014	Isuzu	D-Max			74802-01A	74802-00A
1996-2000	Isuzu	Hombre			74801-01A	74801-00A
2005-2008	Lincoln	Mark LT		Optional no-drill bracket available - part # 74602-01A	74803-01A	74803-00A
1998-2006	Mazda	B-Series		Requires part # 74601-01A for installation	74801-01A	74801-00A
2007-2009	Mitsubishi	Raider	Standard Bed		74801-01A	74801-00A
1998-2017	Nissan	Frontier		Requires part # 74601-01A for installation	74801-01A	74801-00A
2004-2018	Nissan	Titan	Standard Bed		74804-01A	74804-00A
2005-2014	Toyota	Hilux			74821-01A	74821-00A
1984-1994	Toyota	Pickup		Requires part # 74601-01A for installation	74802-01A	74802-00A
2016-2019	Toyota	Tacoma			74802-01A	74802-00A
1995-2015	Toyota	Tacoma		1995-2004 Models require part # 74601-01A Bracket	74801-01A	74801-00A
2000-2006	Toyota	Tundra	Double Cab		74804-01A	74804-00A
2007-2019	Toyota	Tundra			74803-01A	74803-00A


EXTRAS AND OPTIONS

YEARS	MAKE	MODEL	NOTES	PART #
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A
1984-2004	Toyota	All	L Bracket Kit	74601-01A
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A
2004-2019	Ford	F-150	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
2008-2019	Ford	F-250/350	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
1984-2018	All	All	Mounting Kit	74604-01A
1984-2018	All	All	Quick Latch Bracket Kit, recommended for tonneaus and shells	74605-01A
2007-2018	GMC	Sierra	Mounting Bracket	74606-01A
2005-2017	Nissan	Frontier	Latch Kit (screw and barrel only)	74607-01A
1982-2019	All	All	Quick Mount Bracket Kit	74608-01A
1982-2019	All	All	Tonneau Cover Spacer Kit	74609-01A
2014-2019	RAM	Dually	Bracket Kit	74610-01A

BEDXTENDER HD™ MOTO

SLANT-BACK DESIGN LETS YOU HAUL EVEN MORE.

Gives smaller pickups the extra enclosed space needed to secure full-size motorcycles, bikes or any extra-long cargo that you need to haul with the tailgate open. From hay bales to Hondas, it's there when you need it. And when you don't, it flips forward to keep your smaller cargo safe and organized in the truck bed.

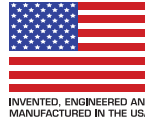

- Patented slant-back design
- Rounded-rectangle, 6063 T6 aluminum alloy tubes
- Torque-resistant clam-shell design composite uprights

- 3-year/36,000 mile warranty
- Durable silver or black powder-coated finish
- Easy assembly and installation

BEDXTENDER HD™ MOTO

YEARS	MAKE	MODEL	SUB MODEL	NOTES	BLACK PART #	SILVER PART #
2004-2012	Chevrolet	Colorado	Standard Bed		74809-01A	74809-00A
1996-2004	Chevrolet	S-Series	Standard Bed	Requires part # 74601-01A for installation	74809-01A	74809-00A
1987-2011	Dodge	Dakota	Standard Bed		74809-01A	74809-00A
2004-2012	GMC	Canyon	Standard Bed		74809-01A	74809-00A
1996-2004	GMC	Sonoma	Standard Bed	Requires part # 74601-01A for installation	74809-01A	74809-00A
1996-2000	Isuzu	Hombre			74809-01A	74809-00A
1998-2006	Mazda	B-Series		Requires part # 74601-01A for installation	74809-01A	74809-00A
2007-2009	Mitsubishi	Raider	Standard Bed		74809-01A	74809-00A
1985-1997	Nissan	Frontier		Requires part # 74601-01A for installation	74809-01A	74809-00A
1998-2017	Nissan	Frontier		Requires part # 74601-01A for installation	74809-01A	74809-00A
1993-1998	Toyota	T-100		Requires part # 74601-01A for installation	74809-01A	74809-00A
1995-2004	Toyota	Tacoma		Requires part # 74601-01A for installation	74809-01A	74809-00A
2005-2015	Toyota	Tacoma			74809-01A	74809-00A
2000-2006	Toyota	Tundra			74809-01A	74809-00A

EXTRAS AND OPTIONS

YEARS	MAKE	MODEL	NOTES	PART #
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A
1984-2004	Toyota	All	L Bracket Kit	74601-01A
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A
2004-2018	Ford	F-150	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
2008-2018	Ford	F-250/350	No Drill Bracket - Mounting Kit (optional upgrade)	74602-01A
1984-2019	All	All	Mounting Kit	74604-01A
1984-2019	All	All	Quick Latch Bracket Kit, recommended for tonneaus and shells	74605-01A
2007-2018	GMC	Sierra	Mounting Bracket	74606-01A
2005-2017	Nissan	Frontier	Latch Kit (screw and barrel only)	74607-01A
1982-2019	All	All	Quick Mount Bracket Kit	74608-01A
1982-2019	All	All	Tonneau Cover Spacer Kit	74609-01A
2014-2019	RAM	Dually	Bracket Kit	74610-01A



BEDXTENDER HD™ MOTO
in Black



BEDXTENDER HD™ MOTO
in Silver

NOMENCLATURE GUIDE

Vehicle manufacturers refer to their cab styles and bed lengths in multiple ways, adding complexity when identifying compatible products. This guide was created to help you compare how each brand describes these vehicle components to their Automotive Aftermarket Industry Association (AAIA) standardized name, making it easy to find a compatible part for your vehicle.

CAB STYLES

MAKE	BRAND NAME	AAIA NAME	DESCRIPTION
Chevrolet/ GMC	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Extended Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
Dodge/ Ram	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Quad Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
	Mega Cab	4-door Extended Crew Cab	4 Full-Size Doors with seat storage
Ford	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	SuperCab	3-door or 4-door Extended Cab	2 Full-Size Doors, 1 or 2 Half-Size Doors
	SuperCrew	4-door Crew Cab	4 Full-Size Doors
Nissan	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	King Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
Toyota	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Access Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Double Cab	4-door Crew Cab	2 Full-Size Doors, 2 3/4-Size Doors
	CrewMax Cab	4-door Extended Crew Cab	4 Full-Size Doors

BED LENGTH


MAKE	BRAND NAME	AAIA NAME
Chevrolet/ GMC	Short Box	Fleetside 68.4 in
	Standard Box	Fleetside 78.0 in
	Long Box	Fleetside 96.0 in
Dodge/ Ram	Short Box	Fleetside 67.4 in
	Mid Box	Fleetside 76.3 in
	Long Box	Fleetside 96.3 in
Ford	5.5 ft. Styleside	Styleside 66.0 in
	6.5 ft. Styleside	Styleside 78.0 in
	8.0 ft. Styleside	Styleside 96.0 in
Toyota	Short Bed	Fleetside 66.7 in
	Standard Bed	Fleetside 78.7 in
	Long Bed	Fleetside 97.6 in

NOTE:
Bed lengths vary by year, make and model of vehicle. The dimensions provided above are for example only, not intended for part-specific fits.


MEASURING BED LENGTH

All the products we sell are custom-made to fit your truck. Bed length is often a key indicator for compatibility.


TO DETERMINE BED LENGTH, measure from the inside of the tailgate to the inside of the bulkhead (see image).

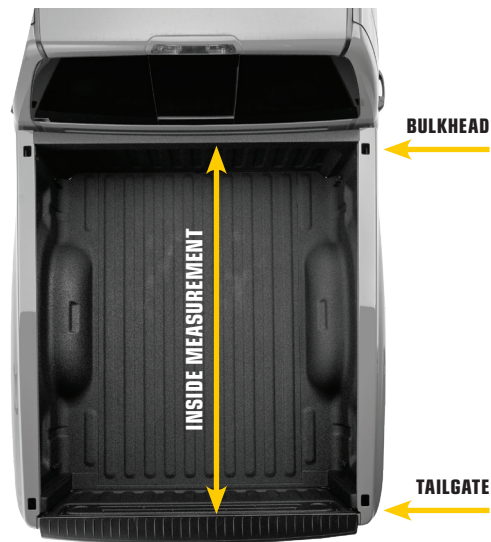


CHEVROLET GMC Silverado shown

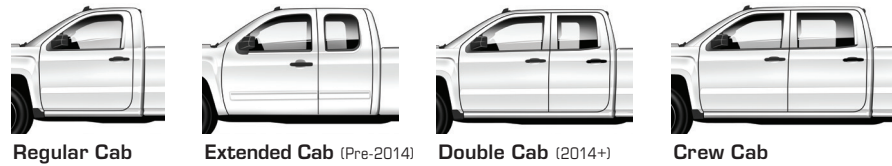


DODGE RAM 1500 shown

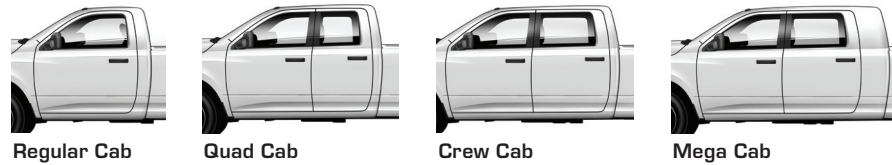


FORD F-150 shown

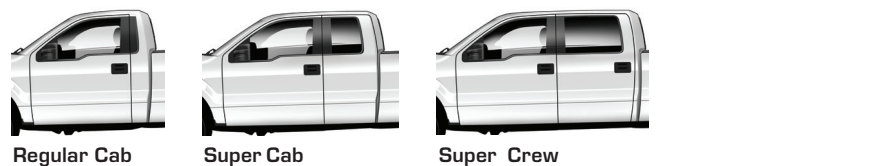

NISSAN Titan shown

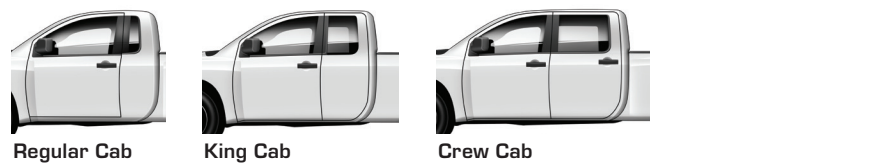

TOYOTA Tundra shown

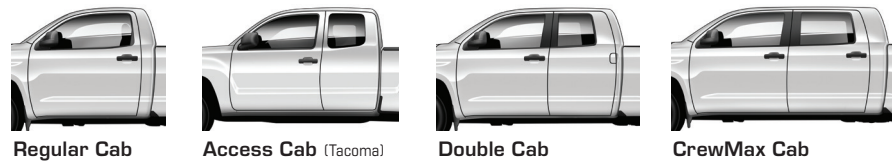

AMP RESEARCH® TUSTIN, CA

The inventor of the electric running board and bed extender categories, AMP Research® is a U.S. manufacturer of aftermarket and OEM automotive accessories for Trucks, Jeeps, SUVs, and Vans. The company specializes in quality products utilizing ISO/TS standards with on-site design and tooling resources.

The company's motto, "INNOVATION IN MOTION" captures the groundbreaking mix of breakthrough products the company has brought to the market.

AMP-RESEARCH IS A BRAND OF LUND INTERNATIONAL

AMP-RESEARCH.COM
888.983.2204

AMP RESEARCH®

Innovation in Motion



AMP-Research.com

CUSTOMER SERVICE & TECHNICAL SUPPORT

888.983.2204
Monday – Friday,
6:00 am – 5:00 pm Pacific

customerservice@
AMP-Research.com

15651 Mosher Avenue
Tustin, CA 92780

Printed in the USA. All content,
including images, Copyright © 2019
Lund International.

Part #: AMPCATALOG
Updated 12/2018



INVENTED, ENGINEERED AND
MANUFACTURED IN THE USA

treadlightly!®

OFFICIAL PARTNER

